

EDGE™

Wireless. Connected. Sensors.



Temperature Intelligence™

EDGE™ S-400

Wireless, portable sensors for monitoring and controlling cold chain performance

- Bluetooth® enabled temperature sensor
- Check temperature readings wirelessly from smartphone or tablet
- Single or multi-use with 3-month battery life
- Internal sensor and memory for 4,000 datapoints
- Wireless access through packing materials, containers, cold equipment and rooms
- Cloud sharing and storage
- Robust IP65 protection against dust and projected liquids

EDGE S-400 is an easy to use, practical and cost-effective solution for wireless temperature tracking. Small enough to fit into most any size and type of container, cooler or enclosure, it can be used to monitor cold-chain performance for temperature-sensitive products without compromising the shipment packaging integrity. Adhesive backing makes placement simple and reliable.

Embedded sensors and Bluetooth® wireless connectivity provide temperature datalogging continuously through the product's journey. Using the free EDGEVue™ app, temperature readings and geolocation data can be easily accessed and shared on demand with iOS and Android smartphones and tablets.



Download the free EDGEVue™ app from iTunes or Google Play

EDGEVue™ provides easy user access to establish customized parameters for each use of the EDGE S-400, including alarms, datalogging intervals, startup options, and time and temperature units.

Data can be transmitted to Google Drive, Dropbox or the EDGEVue Cloud, providing global data access.

EDGE™

Wireless. Connected. Sensors.




Temperature Intelligence™


EDGE™ S-400




Use EDGEVue™ to set-up datalogging profile and preferences

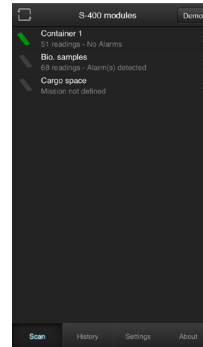

EDGEVue™ automatically detects EDGE S-400 devices within Bluetooth range

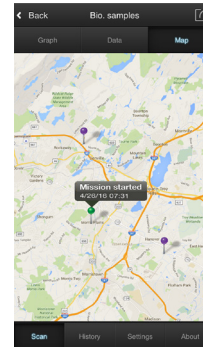

Uses smartphone/tablet GPS to track routes with detailed information

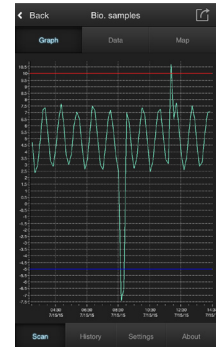

Connect to EDGE S-400 to monitor data on demand, anywhere along the delivery route

Sensor Specifications

Single or multi-use, portable

Temperature Range: -5 to +40°C (-23 to +104°F)

Accuracy: +/- 0.3°C

Resolution: 0.01°C

Temperature Display: °C or °F, selectable

Dimensions

L 81 x W 43.4 x D 8.2 mm (3.2 x 1.4 x 0.3 in)

Thickness: 0.3 in (8.2 mm)

Weight: 0.9 oz (25.2 g)

Case: ABS, IP65 protection, adhesive backing

Serial Number: Unique for each module

Battery

Battery: Li Manganese dioxide / Organic electrolyte, non-replaceable

Battery Life: Up to 3 months (dependent on datalogging frequency)

Datalogging Functions

LED indicator: Alarm status and communication

Alarm Limits: Programmable high and low, with delay

Startup options: Immediate, Delayed with programmable threshold

Datalogging intervals: Programmable - 15 seconds to 1 minute (1 second intervals) OR 1 to 255 minutes (1 minute intervals)

Datalogging stop: Programmable – memory full, or overwrite oldest values

Date/Time Stamps: Programmable local time or GMT

Memory Internal: up to 4,000 datapoints

Reports: CSV and JPG file formats

EDGEVue™ and Wireless Specifications

Bluetooth® Smart enabled

Wireless range: Line-of-sight, up to 50 meters, 164 feet

Device Compatibility: Program and read with iPhone 4S or higher, iPad 3 or higher, and Android 4.4 and higher

Detection: Wireless access through isothermal packaging, refrigerated vehicle siding, freezers, refrigerators and cold rooms (may depend on wall thickness and environmental conditions)

EDGEVue App Free on iTunes and GooglePlay, automatically detects EDGE devices within Bluetooth range

Cloud Storage: Store and share on Google Drive, Dropbox, or EDGE-Cloud